



Quality First For Performance That Lasts

CVC500AHFM

Quick Installation Guide

 
 
1 Determine a secure mounting location for your Car Vision camera and cut an opening using the template provided. Make sure the area you are cutting into is clear and free of electrical wires or other objects that could be damaged. You should allow for a minimum of 2.25" depth behind the vehicles outer surface for proper installation. The flush mount enclosure sets the camera to a 45° angle and as such should be installed on a smooth vertical surface.

Warning: The orientation of the image displayed is critical to safe vehicle operation. An object on the right side of your vehicle needs to be seen on the right side of the display screen. Always confirm proper image orientation before driving or operating your vehicle.

2 Secure the camera. The camera can be secured using several methods including silicone, RTV, adhesive putty, as well as mechanical fasteners such as nuts and bolts or screws.

Changing the Camera Image: If you need to reverse the camera image, you can do so by loosening the screw on the Image Reversal Switch cover located on the back of the camera. With the screw loose, simply rotate the cover out of the way and press the switch. Once the desired image orientation has been set, return the cover to its original position and retighten the screw.

Note: You will need to remove the camera from the flush mount bracket to access the image reversal switch.

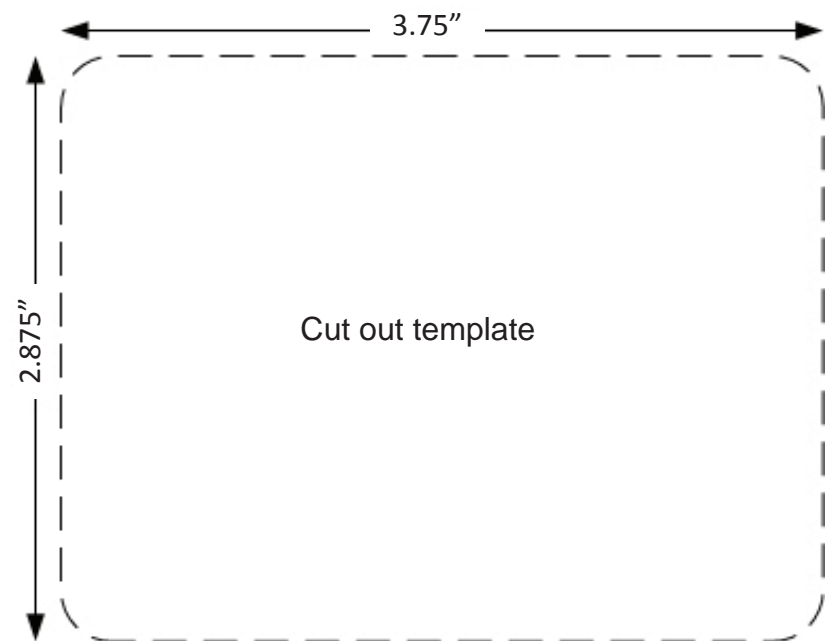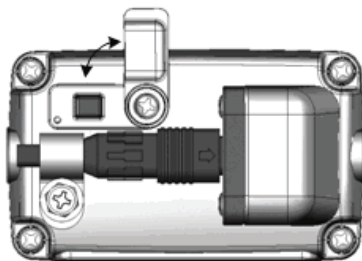

For a more detailed set of installation instructions, please visit www.intecvideo.com/support.html
You may also call us toll free at 800-468-3254 (West) or 800-522-5989 (East) with any questions. Rev D 02/2014