



CVD Series Display			
I have a constant steady tone coming from my remote.			
This is typically the result of improper system initialization. Areas to look at include: Remote control Display Controller			
		Yes	No
Step 1	Check your remote, pigtail and connection to the display. Make sure they are not damaged and are connected properly. Are the cable, connections and remote okay?	Go to step 2	Reconnect and/or replace as necessary and retest
Step 2	Reset system power. Disconnect the controller from vehicle power for 30 seconds then reconnect. Did this correct your problem?	Done	Go to step 3
Step 3	Contact your Intec Service Rep. They may ask you to return your remote control, controller and/or display for service.		