



| | | | |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------|--------------------------------------------------|
| CVD Series Display | | | |
| My system only comes on in reverse. It will not come on manually via the remote. | | | |
| This is typically the result of incorrect wiring at the controller Areas to look at include: Vehicle connection Controller Display to controller cable Remote control | | | |
| | | Yes | No |
| Step 1 | Check the wiring at the controller. Are the red and blue wires tied together? Red should be connected to a post ignition power source and blue to the reverse gear circuit. | Correct wiring and retest | Go to step 2 |
| Step 2 | Does the remote beep when voltage is applied and are the buttons lit up? | Go to step 3 | Go to step 4 |
| Step 3 | Are you using the correct remote? CVR100 when using a CVS100 or CVS102 controller and a CVR500 when using a CVS500 controller. | Go to step 4 | Replace with the correct remote and retest |
| Step 4 | Check your connections at the remote and the display to controller cable. Make sure they are not damaged and are connected properly. Is the cable, connections and remote okay? | Go to step 5 | Reconnect and/or replace as necessary and retest |
| Step 5 | Contact your Intec Service Rep. They may ask you to return your remote control, controller and display to controller cable for service. | | |