



CVD Series Display			
My remote does not work, I have no access to the menu.			
Areas to look at include: Vehicle connection Remote control Display to controller cable Controller			
		Yes	No
Step 1	Are you using the correct remote? CVR100 when using a CVS100 or CVS102 controller and a CVR500 when using a CVS500 controller.	Go to step 2	Replace with the correct remote and retest
Step 2	Does the remote beep when voltage is applied, are the buttons lit up?	Go to step 3	Go to step 5
Step 3	Do you see the On Screen Distance Grid when voltage is applied?	Go to step 4	Go to step 5
Step 4	Check the wiring at the controller. Are the red and blue wires tied together?  Red should be connected to a post ignition power source and blue to the reverse gear circuit.	Correct wiring and retest	Go to step 5
Step 5	Check your connections at the remote and the display to controller cable. Make sure they are not damaged and are connected properly. Is the cable, connections and remote okay?	Go to step 6	Reconnect and/or replace as necessary and retest
Step 6	Contact your Intec Service Rep. They may ask you to return your remote control, controller and display to controller cable for service.		