



CVD Series Display			
My screen does not light up. My screen is Dark.			
This is typically the result of a loss of power to the display. Areas to look at include: Vehicle power, Controller, Display, Display to Controller Cable			
		Yes	No
Step 1	Does the remote beep and light up when you turn the key on?	Go to step 2	Go to step 3
Step 2	Press the ON/SB button. Did the screen light up?	Done	Go to step 4
Step 3	Is there power at the controller?	Go to step 4	Go to step 5
Step 4	Check the connection of the CVR Remote and CVDC6MA cable at the controller and display. Unplug them and reconnect making sure they are firmly seated. Did this correct your problem?	Done	Go to step 6
Step 5	Does the system come on when the vehicle is placed in reverse?	Main system power is tied to reverse – correct and retest	Go to step 7
Step 6	Contact your Intec service rep. They may ask you to return your display as well as the display to controller cable.		
Step 7	Check the fuses in the controller. Are they blown?	Replace fuses and retest. Making sure to replace them only with the same type and rating.	Go to step 8
Step 8	Check your power connection. Is the red wire connected to a post ignition +11 to +32 VDC source of power and is the black wire connected to ground?	Contact your Intec service rep. They may ask you to return your controller for service.	Connect and retest.