



CVM Series Monitor			
I cannot turn my monitor off.			
This is typically the result of incorrect wiring at the monitor. Areas to look at include: Vehicle connection Monitor			
		Yes	No
Step 1	Check the wiring at the monitor. Are the red and blue wires tied together? Red should be connected to a post ignition power source and blue to the reverse gear circuit.	Correct wiring and retest	Go to step 2
Step 2	Contact your Intec Service Rep. They may ask you to return your monitor for service.		