



CVM Series Monitor			
My system only comes on in reverse. It will not come on manually via the ON/SB button.			
This is typically the result of incorrect wiring at the monitor. Areas to look at include: Vehicle connection Monitor			
		Yes	No
Step 1	Check the wiring at the monitor. Are the red and blue wires tied together?  Red should be connected to a post ignition power source and blue to the reverse gear circuit.	Correct wiring and retest	Go to step 2
Step 2	Contact your Intec Service Rep. They may ask you to return your monitor for service.		