



CVM Series Monitor			
My system will not come on automatically in reverse but comes on manually via the ON/SB button.			
This is typically the result of incorrect wiring or loss of trigger voltage at the monitor. Areas to look at include: Vehicle connection Monitor			
		Yes	No
Step 1	Your monitor should be equipped with a fuse in the reverse (Blue) trigger wire. Check the fuse. Is it blown?	Replace 5 amp fuse and retest	Go to step 2
Step 2	Check the voltage supplied to the monitor on the blue wire when the vehicle is placed in reverse. The proper operating voltage can be found on the serial number tag on the back of the monitor. Do you have the proper voltage?	Go to step 3	Apply correct voltage and retest
Step 3	Contact your Intec Service Rep. They may ask you to return your monitor for service.		